


BN 642

Self-clinching insert nuts

Stainless steel A1



For sheet metal with max. hardness HRB 70

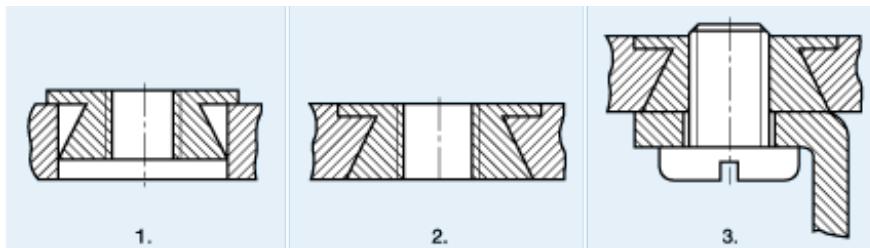

1. Drill or punch the bore, insert the self clinching nut.
2. Press in the nut, do not drive it in.
3. Fasten the screw from the opposite side.

Article#	d ₁	d ₂ max.	h max.	s	Hole size	Sheet thickness	Distance to center
1242652	M2	4,34	1,5	4,8	4,35	1,5-2,3	6
1242660	M2,5	4,34	1,5	4,8	4,35	1,5-2,3	6
1242679	M3	5,39	1,5	6,4	5,4	1,5-2,3	6,7
1242687	M4	7,34	1,5	7,9	7,35	1,5-2,3	7
1242695	M5	7,89	1,5	8,7	7,9	1,5-2,3	8
1242709	M6	8,74	3	9,5	8,75	3,2-3,9	8,7